


Measuring Guide for PVC Windows

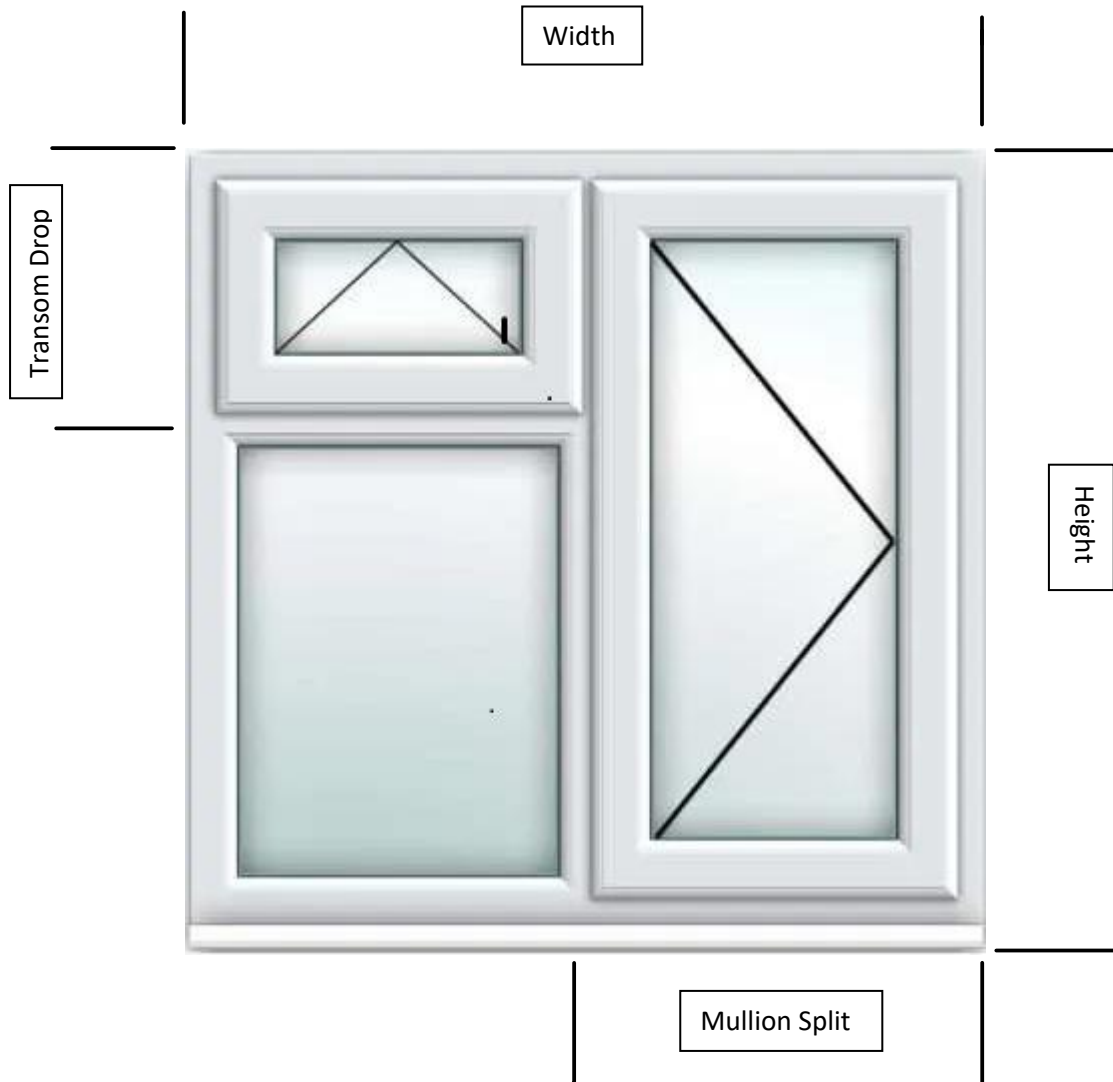

Measuring your windows:

Firstly: The ideal scenario is for the edge of your new window to sit just behind the internal plaster line so take the internal sizes from the plaster on the reveals on either side and then from the window cill up to the plaster on the head of the window. These will be your internal measurements.

Second: Externally take the width measurements in at least 3 places between your external brickwork or render and then take the height measurement in 3 places from the bottom of the external window cill (if it has one) or the top of the stone or tiled cill up to the brickwork-lintel or render at the head of the window. Take the average of your 3 measurements as your width and height.

Ideally the external measurements will be larger than the internal measurements, that way the finishing on the inside of the window will be nice and neat. If the measurements externally are more than 20-30mm larger externally you may want to consider putting an add-on to either side or the top of the window included in your sizes so that the plaster line internally does not interfere with your glazing line.

Exmouth Plastics Ltd, Unit 11 Dinan Way Trading Estate, Exmouth, EX8 4RS
01395 911159

Company Reg No: 13375374 VAT No: 388178737

For full terms and conditions of sale please visit our website.